



FIREFOX

Amplifone Raster Modification

Step 1 is mandatory and must be done immediately.

Steps 2 through 6 provide increased protection to the deflection board and should be installed by a qualified technician as soon as possible, but especially if the game fails.

1. Neck Board

Cut the trace between the pad at CRT socket pin 5 and the nearest pad. Install an insulated jumper (1000 volts or better insulation) between pad at CRT socket pin 5 and either of the pads at spade lug J9. Use a number 20 wire.

2. Cut the trace between connector J8 pin 9 pad and the base pad of Q10. Install a 330 ohm, $\pm 5\%$, $\frac{1}{4}$ watt, resistor between the base of Q10 and the connector J8 pin 9 pad.

CAUTION

To prevent arcing, it is absolutely necessary to use a carbon-composition resistor in the following step.

3. Remove the focus terminal cover from the CRT socket and unsolder the focus lead from the terminal. Solder a 22 meg-ohm, $\pm 5\%$, $\frac{1}{4}$ watt carbon-composition resistor to the terminal with the end flush with the terminal and resistor parallel to the board. Solder the focus lead flush with the other end of the resistor, and trim the resistor lead. Route the focus lead back to the exit groove, and replace the cover.

4. Deflection Board

Install a 1N751A zener diode (5.1 V) to the vertical sync input, anode to ground, as follows:

- Locate the first pad connected to J1 pin 5 on the trace or circuit side of the board. Note: PLL board is installed in place of J1.
- Locate the pad going to ground near J1 pin 6, between pin 6 and R10.
- Install the zener diode (anode to ground) between these two pads on the circuit side of the PCB.


5. a. Remove C5 (0.1 μ F) axial cap.
b. Install a 0.22 μ F (25 V) axial cap between the cathode and gate of Q4 (MC6101), soldering one lead of the cap to the cathode pad (square pad) of Q4 and the other lead to the pad of C5 connected to the gate of Q4. Install the cap on the circuit side of the PCB.
6. Route the high-voltage anode lead away from the deflection board, and secure it with a wire tie wrap.

**FIREFOX is a trademark of Warner Bros. Inc. © 1982 Warner Bros. Inc. © 1983 Atari, Inc.*

737 Sycamore Ave., Milpitas, California 95035 • (408) 943-1120 • (800) 538-1611


NOTE:

Upright FIREFOX games built after game serial number 47000002 will not need this modification. This modification has already been incorporated on all subsequent FIREFOX games.

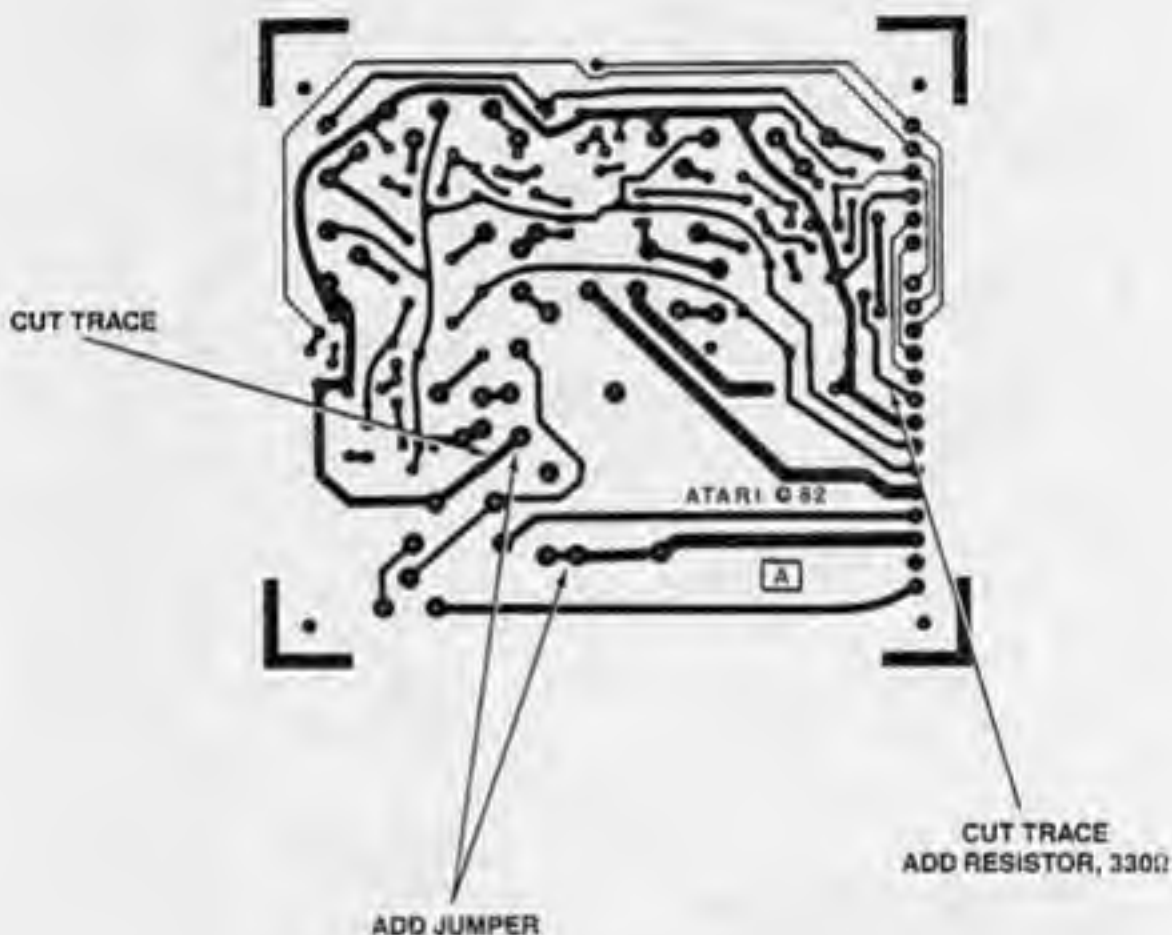


NOTICE TO ALL PERSONS RECEIVING THIS DRAWING
CONFIDENTIAL: This drawing is confidential without the specific written approval of Atari, Inc. This drawing may contain information that is confidential, and neither Atari nor its subsidiaries, nor any of its employees, shall be permitted to use the information contained in this drawing or any design or technical information shown herein for any other purpose than the development of Atari, Inc. products. This drawing is the property of Atari, Inc. and is to be used only for the development of Atari, Inc. products. No part of this drawing is to be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Atari, Inc.

Neck PCB Assembly

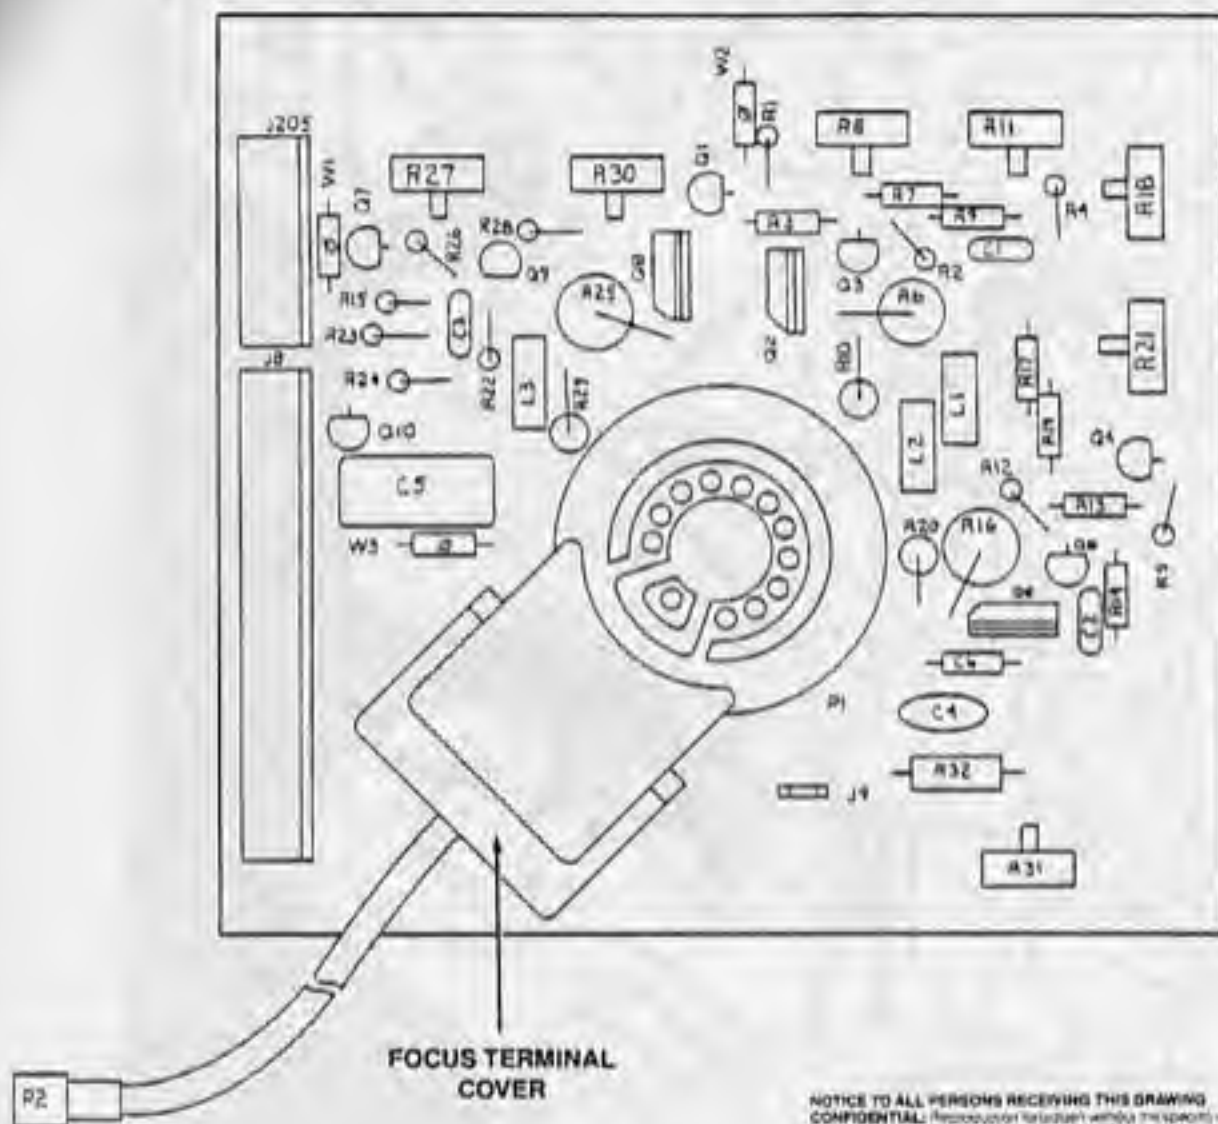

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING
CONFIDENTIAL: Reproduction for use without the express written permission of Intel, Inc., Sunnyvale, CA. This drawing is a confidential document, and neither Intel nor its subsidiaries, agents, or licensees are permitted to use, copy, or disclose the subject matter of this drawing or any confidential technical information shown thereon, nor any right to reproduce this drawing or any data thereof. Except for manufacture by Intel or Intel, Inc., and for manufacture under the conditions written herein, no right is granted to reproduce this drawing or the subject matter thereof, unless by written agreement with Intel or its agent.

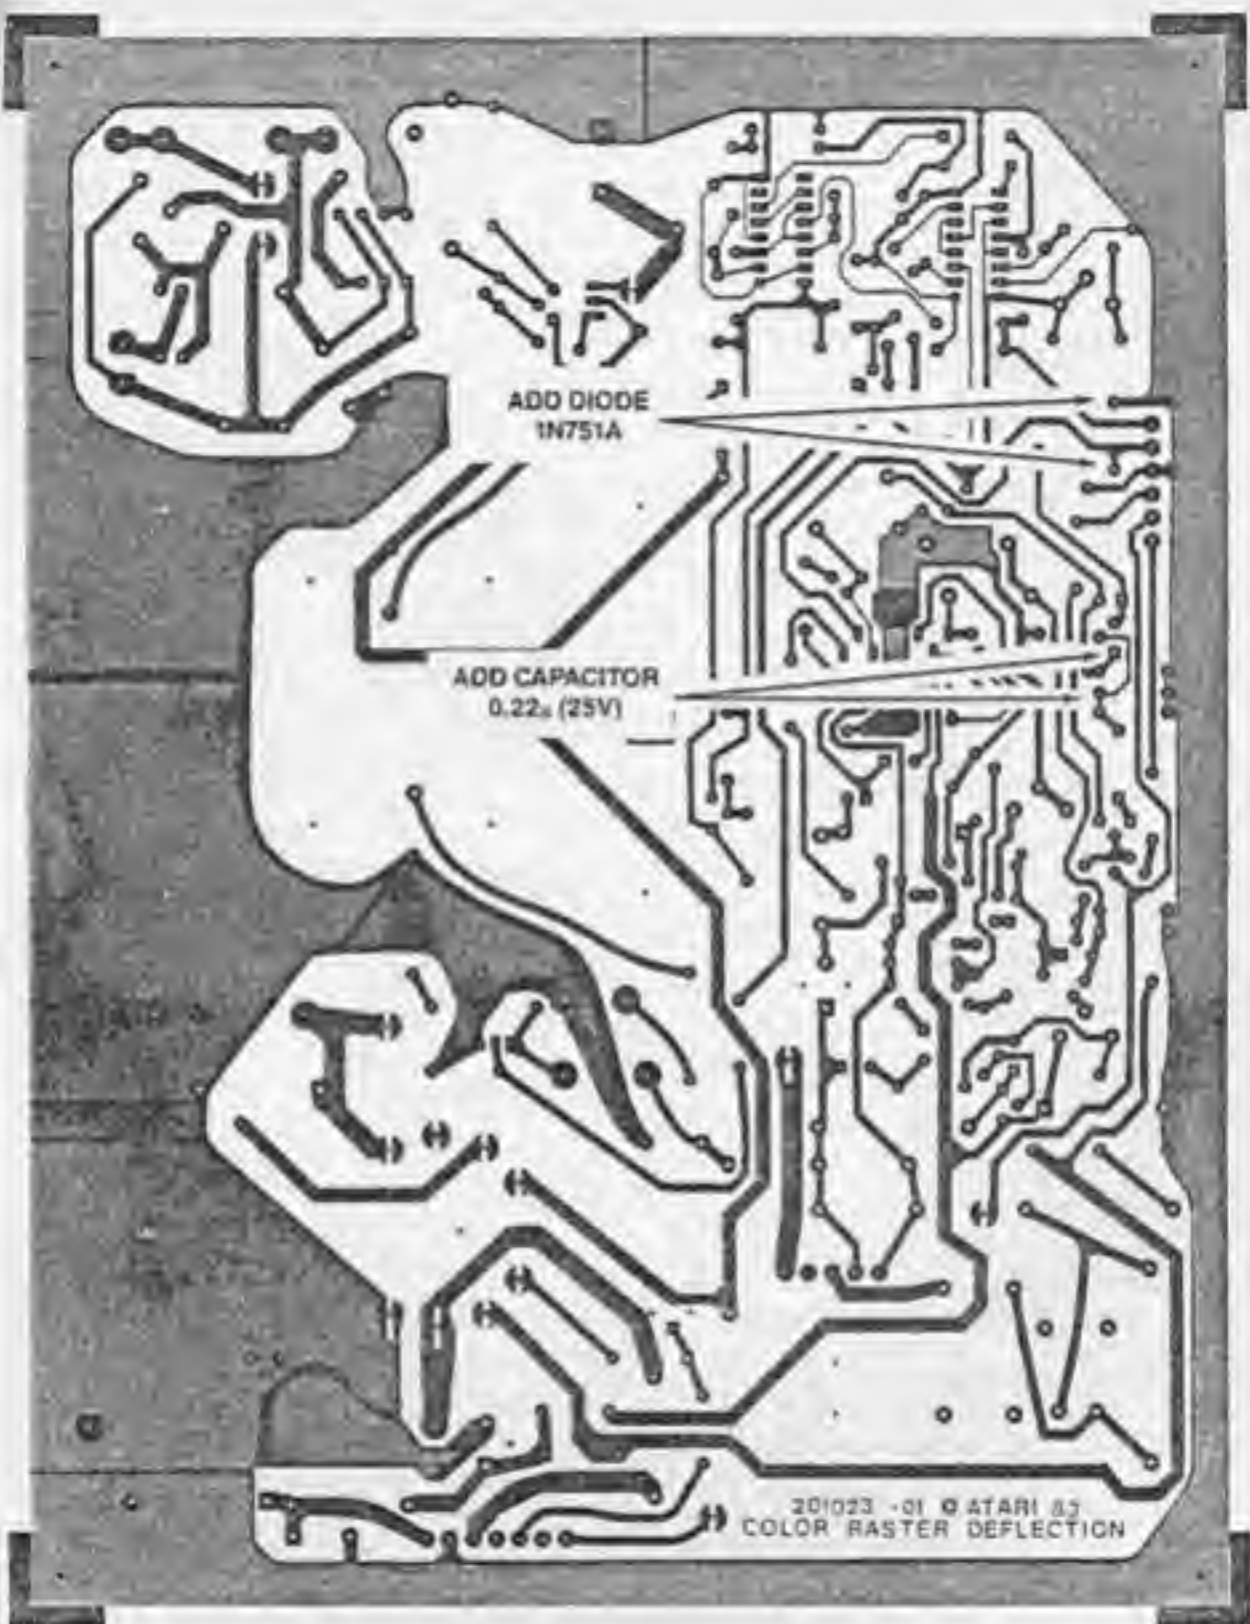[illegible]